PRODUCT NAME: SD125-150, EXPLOSION-PROOFSOUNDER/HORN DOC NO.: EX-TECH-SIG-SAS-12-SD125-150-TM-EN-REV04

**EXPLOSION PROOF SOUNDER/HORN** 

😉 II 2GD

EPL Gb, Db

Exd IIC T4/T5/T6 Gb, IP66

Ex tb IIIC Txxx

## **EX-TECH SIGNALLING SAS**

## SD125-150 EXPLOSION PROOF SOUNDER/HORN

## **TECHNICAL MANUAL**



## Marking details;

Type :	00				
<b>C€</b> 0470 <b>⑤</b> II 2 GD		ATEX 13 NEMKO 1562X			
Ex d IIC T4 Gb Ex tb IIIC T135°C	IP 66	IECEX, NEM 13.0032X CNEX 10.2113X			
T. amb: - 40°C< Ta <+70°C		Р	20 Watt max		
		U	☐ VDC ☐ AC50/60Hz		
			Serial N°:		
AN EXPLO	RNING - DO OSIVE ATM	NOT OSPH	OPEN WHEN HERE IS PRESENT		
			nalling SAS		
Ex-tech Signalling	SAS, Cham	oniers	, France - www.ex-tech.no		

Alternative T class:

Ex d IIC T5 Gb Ex tb IIC T100°C T.amb :-40°C <Ta<+60°C

Ex d IIC T6 Gb Ex tb IIIC T85°C

T.amb: -40°C<TA<+55°C

Please note that every care has been taken to ensure the accuracy of our technical manual. We do not, however, accept responsibility for damage, loss or expense resulting from any error or omission. We reserve the right to make alterations in line with technical advances and industry standards.

#### 1.0 INTRODUCTION

SD-150/125 series Explosion-proof Sounder/Horn & Loudspeaker is designed according to EN / IEC 60079-0, EN / IEC 60079-1 and EN 54 (SB 5879) standard. Enclosure material is UV and corrosion resistance GRP (Glass Reinforced Polyester). This product certified for use and installation in Zone 1 and Zone 2 areas with gases groups of IIA, IIB, IIC and temperature classification of T4~T6. The SD 125 version is made in SS 316 and the SD 150 version is made in GRP.

Users can choose single sounder, speaker or two-in-one sounder & loudspeaker. The design of two-in-one sounder & loudspeaker is unique. According to user control system, 4 stages of alarm tones can be sent out. 63 tones are selectable. Users can record sounds or customize sounds into the sounder by using 5 spare tones. Tone can be preset during installation.

## 2.0 EXPLOSION-PROOF LABELING

All products have a rating label, which carries the following important information:

Product order no.: e.g. SD150DCNNARDN

(Refer to the datasheet for product order selection)
Input voltage: up to 48V DC or 100-254V AC

Code: SD150-1101400001

Ex d IIC Txx Gb

Ex tb IIIC Txx

ATEX Marking:

Gas Group and Category: II 2GD

CE Mark:

 $\mathsf{CE}_{\scriptscriptstyle{0470}}$ 

Warning:

## DO NOT OPEN WHEN AN EXPLOSIVE GAS ATMOSPHERE IS PRESENT

Finish product serial no. (Include date of construction)

Note; exact information is given on the actual label, ref also example on page 1.

## 3.0 TYPE APPROVAL STANDARD

The BC series products have been approved according the following standards:

IEC/EN 60079 General Requirements IEC/ EN 60079-1 Flame proof Enclosure'd'

IEC/ EN 60079-31 Dust atmosphere "t"

# 4.0 ZONES, GASGROUP, CATEGORY AND TEMPERATURE CLASSIFICATION

The BC series products have been certified Ex d IIC T4~T6. This means that the units can be installed in locations with the following conditions:

#### Area Classification:

**Zone 1**: Explosive gas air mixture likely to occur in normal operation.

**Zone 2:** Explosive gas air mixture not likely to occur, and if it does, it will only exist for a short time.

Gas Groupings: Group IIA Propane Group

IIB Ethylene Group

IIC Hydrogen and Acetylene

Equipment Category: ATEX, 2GD

EPL; Gb/ Db

Temperature Range: See label, ref page 1

## 5.0 INSTALLATION

#### **General Requirement**

Selection, Installation, Maintenance and repair of electrical apparatus for use in potentially explosive atmosphere should be done in according to IEC/ EN 6079-14/-17/-19. Product installation must be carried out in accordance with any local codes that may apply and should only be carried out by a competent electrical engineer.

#### Location


The location of the unit should be made with due regard to

the area over which both the sounder and beacon warning signal must be audible and visible. The unit should only be fixed to servies that can carry the weight of the unit.

#### Mounting

#### **Bracket Mounting**

The SD150/125 mounts 'U' shaped stainless steel using one 12mm diameter and two via a bracket by 8.5mm diameter bolt holes in the center of the bracket. The alignment and positions can be adjusted by loosening the two M8 screws, which fastened the stainless steel bracket to the sounder. The sounder should be positioned such that dust, debris or water cannot enter into the horn opening.

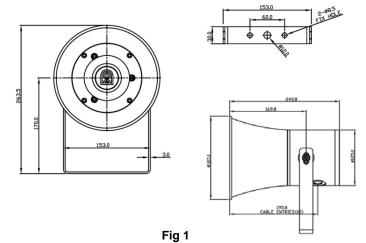

## 6.0 WIRING

## **General Requirement**

EX-TECH SIGNALLING SAS recommends that all cables and cores should be fully identified (suggest using cable from 2.0 to 2.5 mm²).

Ensure that all nuts, bolts and screws are secured. Ensure that only the right and certified cable glands are used and earthed correctly. Ensure that only the rig t and certified stopping plugs are used to blank off unused gland entry points. In order to maintain the IP rating of the product, we recommend SS316L for this application.

#### **Cable Connection**


The cable connection is connected with the terminal blocks on the electronic PCB assembly located in the flameproof enclosure of sounder. Cable connection should be suitably approved for the installation requirements

requirement.

#### **Remove End Cover**

Unscrew the six (6 for BC 150 and 4 for BC 125) M5 retained hex socket head screws of the end cover. This will release the cover from the base. Before replacing the cover, check that the flameproof joints are clean and not damaged, the gasket is still retained in its groove

**CAUTION**: Before removing the cover, ensure the power to the product is isolated. Remove the six pieces of M5 socket screws to open the cover. Twist the cover gently clockwise and anti-clockwise, whilst pulling away from the base, until it comes off. Replace the cover in similar way, but operate in reverse manner as above.

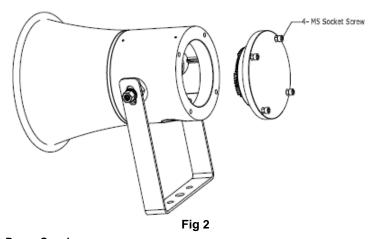

**Power Supply** up to 48V DC or 100-254V AC

PCB WIRING TERMINALS Apply power supply to up to 48V DC or 100-250V AC to 'L' & 'N' (See Fig 1)

## Four Alarm Stages

No sound for Stage 1. There will be sounds for the subsequence

#### Stages:

Stage 1: apply power supply to 'L' & 'N'

Stage 2; connect S1 to 0/ com

Stage 3: apply power supply to 'L' & 'N' and connect

S2 to 0/COM

Stage 4: apply power supply to 'L' & 'N' and connect S1, S2 to

0/COM. Stage DIY (Recording Sound): supply to to 'L' apply

power& 'N' and connect DIY to 0/COM

#### 7.0 TONE SELECTION

The sounder provides 63 tones to be selected for the alarm stage 2 to 4. Three stages of alarm tones can be preset via switch on the Sounder PCB.

#### **Tone Selection Switch**

Use the three (3) DIP switches with 6 binary codes on the **Sounder PCB** to select tones (See Fig 3).

## Tone Selection Table (see attached table 1)

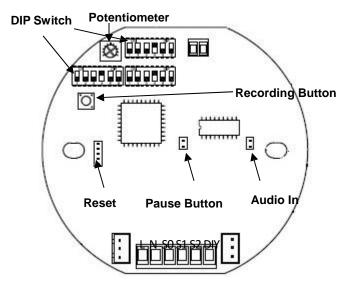


Fig 3

## **8.0 VOLUME CONTROL**

The sounder has a volume control to adjust the output volume of the sounder component. To set the required output volume, adjust the potentiometer-VR1 on the PCB (See Fig 3). The potentiometer should be set to fully clockwise position if maximum output volume is needed.

## 9.0 SOUNDER RECORDING

The sounder can provide 4 tones can be recorded by the user. Use the Audio In and Recording Button (See Fig 3) to record.

The SD150 series product has cable gland entries. Only cable glands approved for Ex 'd' applications can be used, which must be suitable for the type of cable being used and also meet the requirements of the Ex 'd' flameproof installation standard EN/ IEC 60079-14.

## Recording Procedure

- 1. Turn off S1 and S2;
- Set up any DIP Switches as Tone 60-63 (refer to Attached Table 1- Tone Selection Table);
- 3. Insert the Audio IN plug;
- Press the Recording Button and hold the button until the recording is finished.

**CAUTION:** The sounder will begin to record after 3 seconds from pressing the button. Don't release the button when the recording is in process. The maximum of recording time is 20 seconds.

#### 10.0 SOUND PAUSE

The sound can pause by pressing the Recording Button. (See Fig 3)

As the pausing period, please refer to the below table:

Pressing Times	Default Setting	Option		
1	1 minute	10 minute		
2 5 minute		30 minute		
3	10 minute	60 minute		
4	Restore to the sound	Restore to the sound		

In order to have the option function, please inform EX-TECH SIGNALLING SAS in advance before EX-TECH SIGNALLING SAS begin the production of the sounder.

## 11.0 CABLE GLAND

**SAFETY WARNING:** If the SD150 is used at high ambient temperatures, i.e. over +40°C, then the cable entry temperature may exceed +70°C and therefore suitable heat resisting cable glands must be used, with a rated service temperature of at least 95°C.

If a high IP (Ingress Protection) rating is required, a suitable sealing washer must be fitted under the cable gland.

When only one cable entry is used, the other one must be closed with an Ex 'd' flameproof blanking plug, which must

## 12.0 END OF LINE MONITORING

An end of line monitoring diode or an end of line monitoring resistor can be connected across the 24V+ and 0 terminals. If an end of line monitoring resistor is used, it must have a maximum resistance value of 3k ohms and a minimum wattage of 0.5 Watts; or a minimum resistance value of 1.2k ohms and a maximum wattage of 2 Watts.

#### 13.0 MAINTENANCE

During working life of the product, little or no maintenance is required. GRP and ss 316 are resistant to most of the acids, alkalis and chemicals. If abnormal or unusual environmental conditions occur due to accident etc., visual inspection is recommended. If any failure occurs but not cause by human factor, the product can be returned to EX-TECH SIGNALLING SAS for free repair or replacement during warranty period.

As to avoid electrostatic charge build-up, only exterior of the product can be cleaned with a damp cloth. If spare parts are required, these can be supplied by EX-TECH SIGNALLING SAS Company.

**SAFETY WARNING**: In the case of Anti-Static and UV Resistant GPR and SS 316, the painting of the enclosure

surface has been processed specially. To maintain the product to be Anti-Static, extra normal painting is not allowed.

#### 14.1 CONDITIONS FOR SAFETY USE

- This apparatus is suitable to be used only in ambient temperature as stated at the label
- ii. Other than product manufacturer, painting and surface finishing are not permitted by the third party.
- iii. When used in dust atmosphere, flameproof cable entry devices or stopping plugs have to be selected and installed carefully in order to maintain the IP rating (IP66/67) of the product.

#### **Specific Condition for Use**

Repairs of the flameproof joints must be made in compliance with the structural specifications provided by the manufacturer. Repairs must not be made on the basis of values specified in tables 1 and 2 of EN/ IEC 60079-1.

Please contact Ex-Tech Signalling for further details.

## EX-TECH-SIG-SAS-12-SD125-150-TM-EN-REV04

## **Attached Table 2: Tone Selection Table**

TEM		Max dB	SW1,SW2,SW3,SW4			
Tone	Frequency	Tone Description	Tone Application	Waveform	(DB)@1M	Bit 123456
0	0	0	0	0	0	000000
01	300Hz	Continuous			105	100000
02	340Hz	Continuous			105	010000
03	440Hz	Continuous			105	110000
04	554Hz	Continuous	1		106	001000
05	660Hz	Continuous	All-clear, Sweden		104	101000
06	800Hz	Continuous			105	011000
07	1000Hz	Continuous	PFEER Toxic Gas		109	111000
80	1200Hz	Continuous	2		106	000100
09	2000Hz	Continuous	-2:		105	100100
10	2400Hz 2850Hz	Continuous		**	103 102	010100
12	420Hz@0.625 sec	Continuous	Australian AS2220		102	110100
13	420Hz@0.625 sec 544Hz@0.875 sec	intermittent	Australian, AS2220		100	001100
14			Swadish Fire Alarm			101100
15	660Hz@150ms on,150ms off 660Hz@1.8sec on,1.8sec off	intermittent intermittent	Swedish Fire Alarm Swedish Fire Alarm		100 103	011100 111100
16	745Hz@500ms on,500ms off	intermittent	Gwedish i ne Alai III		103	000010
17	800Hz@250ms on,250ms off	intermittent			102	100010
18	800Hz@250ms on,250ms on 800Hz@250ms on,1sec off	intermittent	1		102	010010
19	1000Hz@250ms on,1sec off	intermittent			100	110010
20	1000Hz@250Hs on,250Hs off	intermittent	Back-up Alarm(LF)		105	001010
21	1000Hz@250ms on,1sec off	intermittent	Back-up Alarm(LF)		105	101010
22	1000Hz@250Hs on,1sec off	intermittent	PFEER Gen, Alarm		105	011010
23	2400Hz@250ms on,250ms off	intermittent	FI EER Gell, Alailli		101	111010
24	2400Hz@500ms on,500ms off	intermittent			100	000110
25	2850Hz@1sec on,1sec off	intermittent	Back-up Alarm(HF)		101	100110
26	2850Hz@150ms on,100ms off	intermittent	Pelican Crossing		101	010110
27	970Hz@0.5sec on/0.5sec off,1.5sec off	3 Pulses	ISO 8201 Low tone		105	110110
28	2850Hz@0.5sec on/0.5sec off,1.5sec off	3 Pulses	ISO 8201 Low tone		101	001110
29	700Hz@2sec on/2sec off	intermittent	Air-raid, Sweden		105	101110
30	700Hz@125ms on/125ms off	intermittent	Local warning, Sweden		105	011110
31	720Hz@0.7sec on/0.3sec off	intermittent	Industrial alarm, Germany		105	111110
32	544Hz/440Hz@500ms	Alternating	Swedish Fire Alarm		101	000001
33	544Hz/440Hz@100ms/400ms	Alternating	AFNOR,NFS 32-001		101	100001
34	544Hz/440Hz@1sec	Alternating	Turn-out, Sweden		100	010001
35	800Hz/1000Hz@125ms	Alternating	Increased Urgency		104	110001
36	2400Hz/2900Hz@125ms	Alternating	Security Deterrent		100	001001
37	800Hz/1000Hz@250ms	Alternating	Fire Alarms		104	101001
38	800Hz/1000Hz@580ms	Alternating	The fundame		104	011001
39	1000Hz/2000Hz@500ms	Alternating			104	111001
10	2400Hz/2900Hz@250ms	Alternating	Security Alarms		100	000101
11	500Hz1000Hz@6Hz	Fast whoop	cocarri, marrino		103	100101
12	500Hz1200Hz@0.3Hz	Sweeping			102	010101
43	660Hz1200Hz@1Hz	Sweeping			101	110101
14	800Hz1000Hz@1Hz	Med Sweeping(LF)			101	001101
15	800Hz1000Hz@7Hz	Fast Sweeping(LF)			102	101101
16	2400Hz2900Hz@1Hz	Sweeping			100	011101
17	2400Hz2900Hz@7Hz	Fast Sweeping		\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	100	111101
48	800Hz1000Hz@50Hz	Low Freq Buzz	Buzz	/WWWWW	100	000011
19	2400Hz2900Hz@50Hz	High Freq Buzz	Buzz	WWWWWW	100	100011
50	500Hz1200Hz@2.5sec↑ 0.5sec	Slow Whoop			102	010011
1	500Hz1200Hz@5sec † , 0.25sec	Slow Whoop	Evacuation, Netherlands		102	110011
2	1200Hz500Hz@1Hz	Reverse sweeping	Evacuation, Germany	MMMM	102	001011
53	1400Hz1600Hz@1sec ↑, 0.5sec ↓	sweeping	NFC 48-265		100	101011
4	Simulated Bell	Fast Shake	Bell		98	011011
55	800Hz/660Hz	Tow tone chime	Int'l evacuation alarm		102	111011
6	800Hz/1000Hz	ISO 8201 Evacuation	Int'l evacuation alarm		102	000111
57	250Hz1200Hz@3sec ↑, 6sec 3sec ↓	Motor Siren-slow rise			104	100111
58	250Hz800Hz@3sec † , 6sec 3sec ↓	Motor Siren-slow rise			105	010111
9	250Hz2400Hz@6sec ↑, 6sec 6sec ↓	Motor Siren-slow rise			100	110111
0	Client Spare recording					001111
31	Client Spare recording					101111
62	Client Spare recording				9	011111
	Client Spare recording					111111

EX-TECH SIGNALLING SAS
ZA Les Montagnes
355 rue de la Génoise
16430 CHAMPNIERS (France)


Tel: +33 5 45 61 81 68 Fax: +33 5 45 23 29 46

Website: www.ex-tech.no

E-mail: sales.signalling@ex-tech.no



ITEM		SW1, SW2, SW3, SW4	COMSUPTION					
Tone	Frequency	Tone Description	Tone Application	Waveform	dB@1meter	Bit 123456	- 1	AC (mA)
00	0	0	0	0	0	000000	60	10
01	300Hz	Continuious			105	100000	925	105
02	340Hz	Continuious			105	010000	925	105
03	440Hz	Continuious			105	110000	950	105
04	554Hz	Continuious	All along Country		106	001000	925	99
05 06	660Hz	Continuious	All-clear, Sweden		104 105	101000	904	90 78
06	800Hz 1000Hz	Continuious	DEEEB Toxic Cos		105	011000	795 840	80
		Continuious	PFEER Toxic Gas		109	111000	930	83
08 09	1200Hz 2000Hz	Continuious Continuious	+		105	000100	990	69
10	2400Hz		+		103	100100 010100	945	60
11	2850Hz	Continuious	+		103	110100	880	48
12	450Hz@0.625 sec	Continuious	Australian AS2220		102	001100	1050	117
13	450H2@0.825 Sec 544Hz@0.875sec	Intermittent Intermittent	Australian, AS2220		100	101100	1000	106
14	660Hz@150ms on, 150ms off		Swadish Fire Alarm	+	104	011100	960	96
15	660Hz@1.8 sec on, 1.8sec off	Intermittent	Swedish Fire Alarm Swedish Fire Alarm	+	100	111100	985	100
16	745Hz@500ms on, 500ms off	Intermittent	Swedish Fire Alarm		103	000010	840	84
17	800Hz@250ms on, 250ms off	Intermittent	+		102	100010	820	76
18	800Hz@250ms on,1s off	Intermittent			102	010010	850	84
19	1000Hz@250ms on, 250ms off	Intermittent Intermittent			105	110010	890	80
20	1000Hz@500ms on,500ms off	Intermittent	Back-up Alarm (LF)		105	001010	870	82
21	1000Hz@350ms on,1s off	Intermittent	Back-up Alamii (LF)		105	101010	900	84
22	1000Hz@250ms on,1s on 1000Hz@1s on,1s off		DEEEB Con Alorm		105	011010	890	83
23	2400Hz@15 0n,15 0n 2400Hz@250ms on, 250ms off	Intermittent	PFEER Gen, Alarm		105	111010	1020	62
24	2400Hz@250ths off, 250ths off	Intermittent			100	000110	1010	50
25	2850Hz@1s on, 1s off	Intermittent Intermittent	Back-up Alarm (HF)		100	100110	930	50
			· · · · · ·		101		900	82
26 27	2850Hz@150ms on, 100ms off 970Hz@500ms on,500ms off, 1.5s off	Intermittent 3 Pulses	Pelican crossing ISO 8201 Low Tone		101	010110 110110	870	51
28	2850Hz@500ms on, 500ms off, 1.5s off	3 Pulses	ISO 8201 Low Tone		103	001110	950	90
29	700Hz@2s on, 2s off	Intermittent	Air-raid, Sweden		101	101110	890	86
30	700Hz@25 0H, 25 0H 700Hz@125ms on, 125ms off	Intermittent	Local Warning, Sweden		105	011110	875	87
31	720Hz@0.7s on, 0.3s off	Intermittent	Industrial alarm, Germany		105	111110	875	102
32	544Hz/440Hz@500ms	Alternating	Swedish Fire Alarm		103	000001	970	102
33	544Hz/440Hz@100ms/400ms	Alternating	AFNOR, NFS 32-001		101	100001	960	104
34	544Hz/400Hz@1s	Alternating	Turn-out, Sweden		100	010001	970	80
35	800Hz/1000Hz@125ms	Alternating	Increased Urgency		104	110001	830	55
36	2400Hz/2900Hz@125ms	Alternating	Security Deterrent		100	001001	950	78
37	800Hz/1000Hz@250ms	Alternating	Fire Alarms		104	101001	830	78
38	800Hz/1000Hz@580ms	Alternating	THE Alarms		104	011001	840	75
39	1000Hz/2000Hz@500Ms	Alternating			104	111001	1020	55
40	2400Hz/2900Hz@250ms	Alternating	Security Alarms		100	000101	950	92
41	500Hz1000Hz@6Hz	Fast Whoop	Security Alarms	<b>~~</b>	103	100101	900	102
42	500Hz1000Hz@0.3Hz	Sweeping			102	010101	1000	80
	660Hz1200Hz@1Hz	Sweeping			101	110101	910	78
	800Hz1000Hz@1Hz	Med Sweeping (LF)			101	001101	830	78
45	800Hz1000Hz@7Hz	Fast Sweeping (LF)			102	101101	800	55
46	2400Hz2900Hz@1Hz	Sweeping			100	011101	930	55
47	2400Hz2900Hz@7Hz	Fast Sweeping			100	111101	910	75
48	800Hz1000Hz@50Hz	Low freg buzz	Buzz	www	100	000011	810	55
49	2400Hz2900Hz@50Hz	High freq buzz	Buzz	//////////////////////////////////////	100	100011	900	103
50	500Hz1200Hz@2.5s ↑ 0.5s	Slow Whoop			102	010011	1010	102
51	500Hz1200Hz@5s ↑ 0,25s	Slow Whoop	Evacuation, Netherlands		102	110011	1000	104
52	1200Hz500Hz@1Hz	Reverse Sweeping	Evacuation, Germany	mmm	102	001011	960	84
53	1400Hz1600Hz@1s ↑ 0,5s ↓	Sweeping	NFC 48-265		100	101011	1040	66
54	Simulated bell	Fast Shake	Bell	<u> </u>	98	011011	860	102
55	800Hz/660Hz	Tow tone chime	Int'l evacuation alarm	<u> </u>	102	111011	980	102
56	800Hz/1000Hz	ISO 8201 Evacuation	Int'l evacuation alarm	<del> </del>	102	000111	880	81
57	250Hz1200Hz@3s ↑, 6s, 3s ↓	Motor Siren-slow rise	Cvacaacion alami		104	100111	1000	107
58	250Hz800Hz@3s ↑, 6s, 3s ↓	Motor Siren-slow rise			105	010111	1020	107
	1 UUUIIL@UU   , UU, UU W	310 V 113C	i		1 100	010111	1020	106

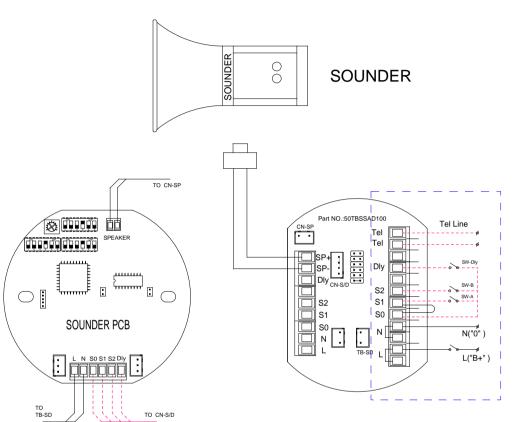

Wiring For Customer

#### Wiring Method

#### Factory default settings

- 1. S0 and S1 are connected (default stage 1 alarm output).
- 2. Connect power supply line to terminals "L" and "N". If power supply is DC. "L" presents "+". "N" presents "0".
- 3. The unit will alarm (default stage 1 alarm output) when power is on.

#### Three stages alarm output settings

- 1. Connect power supply line to terminals "L" and "N". If power supply is DC. "L" represents "+". "N" represents "0".
- 2. Connect S1 to S0 for stage 1 alarm output Connect S2 to S0 for stage 2 alarm output Connect S1\S2 to S0 for stage 3 alarm output
- 3. The unit won't alarm when power is on.
- 4. The unit will alarm as stage 1 when switch 1 is on. The unit will alarm as stage 2 when switch 2 is on. The unit will alarm as stage 3 when switches 1/2 are on.

#### Telephone Initiated PCB Function

- 1. Connect the telephone line to the "Tel" terminals.
- 2. The unit will alarm when telephone rings.
- 3. The unit will stop alarming when the telephone handset is

Please refer to our product technical manual for more details.


#### Cable Selection

Please select suitable size cable according to the distance between control room & the terminals and the quantity of equipments used.

Normal size for AC power supply cable L & N is 1.5mm². Normal size for DC power supply cable L & N is 2.5mm<sup>2</sup>.

Please select the quantity of control cables (0 to 4)according to the actual requirement. Normal size for control cable is 1mm<sup>2</sup>.

00 - 15/02/2016	Création					
Revision - date	Reason					
Material					Size:	
Treatment			<b>Ex-tech</b> € € x-tech s	100	Δ2	
Specifications			CA COCKS	ignatting	$\Lambda$ 0	
Drawing part		Scale:	Project / N° PO	Do	Dossier	
		1:1 Drawn by:				
WIRING DIAGRAM SD100_125_150		P. TRAUMAT	-	-		
			N° Drawing	Index	Folio	
		Date :	CD400 40E 4E0	0.4		
		15/02/2016	SD100_125_150	01	1/1	

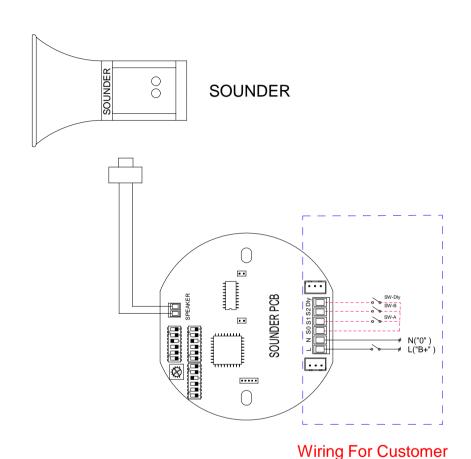

#### Wiring Method

#### Factory default settings

- 1. S0 and S1 are connected (default stage 1 alarm output).
- 2. Connect power supply line to terminals "L" and "N". If power supply is DC. "L" presents "+". "N" presents "0".
- 3. The unit will alarm (default stage 1 alarm output) when power is on.

#### Three stages alarm output settings

- 1. Connect power supply line to terminals "L" and "N". If power supply is DC. "L" represents "+". "N" represents "0".
- 2. Connect S1 to S0 for stage 1 alarm output Connect S2 to S0 for stage 2 alarm output Connect S1\S2 to S0 for stage 3 alarm output
- 3. The unit won't alarm when power is on.
- 4. The unit will alarm as stage 1 when switch 1 is on. The unit will alarm as stage 2 when switch 2 is on. The unit will alarm as stage 3 when switches 1/2 are on.

#### Telephone Initiated PCB Function

- 1. Connect the telephone line to the "Tel" terminals.
- 2. The unit will alarm when telephone rings.
- 3. The unit will stop alarming when the telephone handset is

Please refer to our product technical manual for more details.

#### Cable Selection

Please select suitable size cable according to the distance between control room & the terminals and the quantity of equipments used.

Normal size for AC power supply cable L & N is 1.5mm². Normal size for DC power supply cable L & N is 2.5mm<sup>2</sup>.

Please select the quantity of control cables (0 to 4)according to the actual requirement. Normal size for control cable is 1mm<sup>2</sup>.

SD125W 150W

01

#### Création 00 - 30/08/2016 Reason Revision - date Size: **Ex-tech** Signalling Treatment Specifications Project / N° PO Dossier 1:1 Drawing part P. TRAUMAT N° Drawing Index Folio

30/08/2016

WIRING DIAGRAM SD125W\_150W